

FAAST LT

Software to upgrade firmware
(FAAST LT upgrade tool.exe V1.1)

The following procedure should be used to upgrade the firmware in a FAAST LT device (either loop based or stand-alone). To identify the current version of firmware in the unit, run PipeQLT and read the Device Information. (Check Firmware Revision: HW Version __). The software required to upgrade a FAAST LT device needs to be downloaded using a file transfer protocol. Copy ftp.mrserver.it into your internet browser URL field.

To activate, the following information will be required:

nome utente (account name): systemsensor

password: it46user

The setup will first install a proprietary Renesas FDT program (Flash Development Tool), required to re-write the microcontroller memory and it will then run the upgrade routine itself. The upgrade process is explained step by step in the program window. Ensure that the FAAST LT unit is powered off and on when requested to do so.

Note: At step 3, wait 5 second before clicking on the Si () button. (If the USB DEVICES dialog box appears, wait 5 second before clicking on the OK button, then click Si), as shown in Figure 1. below.

See Figure 2 below for descriptions of the final steps; the procedure finishes with a message that the upgrade has been successful. It is recommended that the firmware upgrade is noted indelibly on the product label.

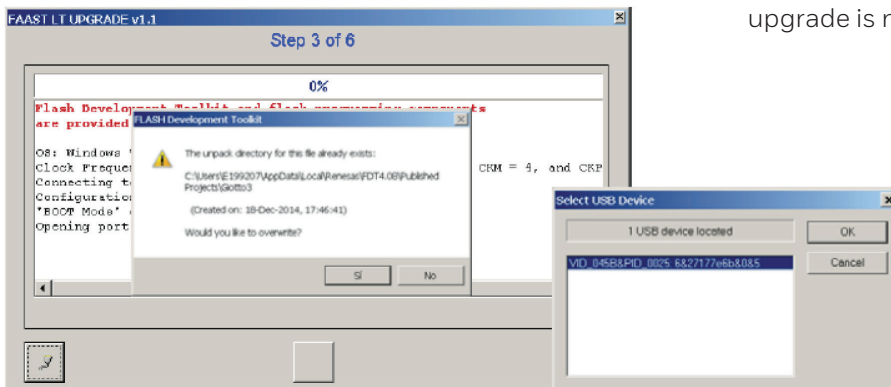


Figure 1.



Figure 2.

Please contact your Representative if you have any questions.

www.faast-detection.com